

## PRODUCT DATA

### NOISEBETA FOAM EAR PLUGS (DISPOSABLE) - MODEL 6060 [INC. PRODUCT 6067 & 6068]

#### INSTRUCTIONS FOR USE

NOISEBETA 6060 Ear Plug hearing protection must be properly worn to provide effective protection. Follow these instructions and contact the supplier where needed.

It is recommended that the wearer should ensure that:

- The Ear Plugs are fitted, adjusted and maintained in accordance with manufacturer's instructions.
- The Ear Plugs are worn at all times in noisy surroundings.

[Note: These Ear Plugs are disposable.]

#### WARNINGS

If the above recommendations are not adhered to, the protection afforded by the Ear Plugs will be severely impaired.



This product may be adversely affected by certain chemical substances. Further information should be sought from the manufacturer.

Keep away from small children, [risk of inhalation and suffocation].

#### FITTING INSTRUCTIONS

Ear Plugs must be put in before exposure to noise and should be worn at all times in noisy environment.

- Roll Ear Plug between tips of fingers to compact foam into a small crease free cylinder.
- Insert Ear Plug into ear canal and hold until plug expands.
- Ensure Ear Plug is suitably fitted, [see diagram below].
- After use, remove Ear Plug slowly and with a twisting motion to gradually break the seal. Rapid removal may damage the ear drum.

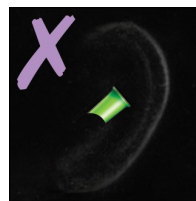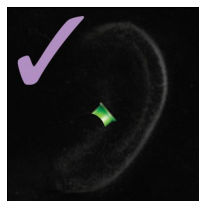

Horizon House, Estate Road Five, Grimsby, DN31 2TG, United Kingdom

• +44 (0)8455 444 000 • sales@betafit.com • www.betafit.com

## PRODUCT DATA

### NOISEBETA FOAM EAR PLUGS (DISPOSABLE) - MODEL 6060 [INC. PRODUCT 6067 & 6068]

#### ATTENUATION VALUES

SNR=34dB H=33dB M=31dB L=30dB  
Nominal Diameter=7-11

Frequency (Hz)	125	250	500	1000	2000	4000	8000
Mean Attenuation	31.6	34.3	35.8	35.0	35.4	45.3	44.7
Standard Deviation	4.9	5.1	5.0	4.8	4.0	4.2	4.5
Assumed Protection	26.7	29.2	30.8	30.2	31.4	41.1	40.2

Assumed Protection rounded to one decimal place.

**NOTE:** Tested According To BS EN 352-2:2002.

#### STORAGE & MAINTENANCE

Before use, store in a dry, clean, uncontaminated environment.


These disposable Ear Plugs must be replaced after each use and should be disposed of away from children.

This equipment is for personal use and should not be shared by different operators.

**CAUTION:** Whilst every effort is made to ensure the material, which comes into contact with wearer's skin, does not cause an allergic reaction, this may not be the case for a minority of susceptible individuals. In the event of any such problem, stop wearing the ear protector immediately and seek professional advice.

#### **FOR FURTHER INFORMATION**

**CONTACT YOUR LOCAL DISTRIBUTOR:**



Horizon House, Estate Road Five, Grimsby, DN31 2TG, United Kingdom  
• +44 (0)8455 444 000 • sales@betafit.com • www.betafit.com